

ACV200 Seal Upgrade Kit

#10630 Installation

As of November 1, 2015, the seal replacement kit has been redesigned to improve sealing and chemical resistance. This upgrade is available for units manufactured after the 32nd week of 2005. Units manufactured prior to this date can be updated with part #12574, top assembly upgrade.












New repair kit parts.



2. Use screwdriver to pry seal retainer out.

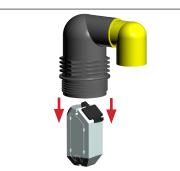


3. Pull float and seal from housing.



1. To begin, unscrew ACV200 housing from base.



4. Remove old seal from float.

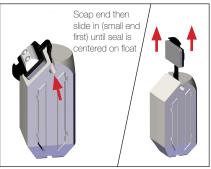


5. Slide in new seal onto float. Pull up on seal to ensure seal is centerted.



8. Replace o-ring in base.



6. Carefully guide seal into slots. Use flathead screwdriver to guide the seal in place.

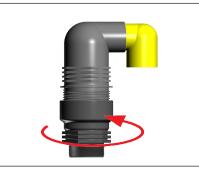

9. Screw housing and base back together.



7. Slide in new retainer.



10. Replace yellow elbow with new gray one to clearly indicate updated ACV.

